

**Mova 305**

**Quick Start Guide**

Version 2.0

## Overview of phone and buttons


Front, top, bottom and left-side view



No.	Item	Function
1	<b>POWER Button</b>	Press this button to turn off your device temporarily and switch the device to sleep mode. Press and hold (about 5 seconds) this button to turn off your device completely. When your device is in sleep mode, you can still receive calls; however, the phone function is off when you turn the device off completely.
2	<b>Power LED</b>	Bi-color LED Power indicator, battery charging status.
3	<b>Front Camera Lens</b>	Use this front built-in camera for video calls
4	<b>Speaker</b>	Listen to audio media or phone calls.
5	<b>Touch Screen</b>	Use to write, draw, or make selections with the stylus.
6	<b>START menu KEY</b>	Press this button to active your START menu.
7	<b>Left SOFT KEY</b>	Performs the command shown in the label above the button.
8	<b>Right SOFT KEY</b>	Performs the command shown in the label above the button.
9	<b>OK Button</b>	Press this button to exit the current performance.
10	<b>END Button</b>	Press this button to end a call or silence the ring from an incoming call. Also, press this button to return to the Start screen from any location.
11	<b>Messaging</b>	Press this button to quick start Messaging.

<b>12</b>	<b>Navigation Pad</b>	Press the navigation pad to scroll left, right, up or down on the display; press the center button to enter a selection.
<b>13</b>	<b>Video phone</b>	Press this button to access the video phone.
<b>14</b>	<b>TALK Button</b>	Press this button to make a call to the name or number shown on the screen or to answer a call.
<b>15</b>	<b>Microphone</b>	Do not cover the microphone with your hand during phone call.
<b>16</b>	<b>Sync Connector</b>	Use this connector for synchronizing data or recharging the battery. You can insert USB cable or multi-head AC adapter provided with the device to this connector.
<b>17</b>	<b>Earphone Jack</b>	Connect a compatible headset to the connector of your device.
<b>18</b>	<b>Scroll Wheel</b>	Scroll through any menus with your thumb and press the scroll wheel to make a selection.
<b>19</b>	<b>Side OK Button</b>	Press this button to exit the current performance.
<b>20</b>	<b>CAMERA Button</b>	Press to launch the camera. Press again to take a picture.

### Back and right-side view

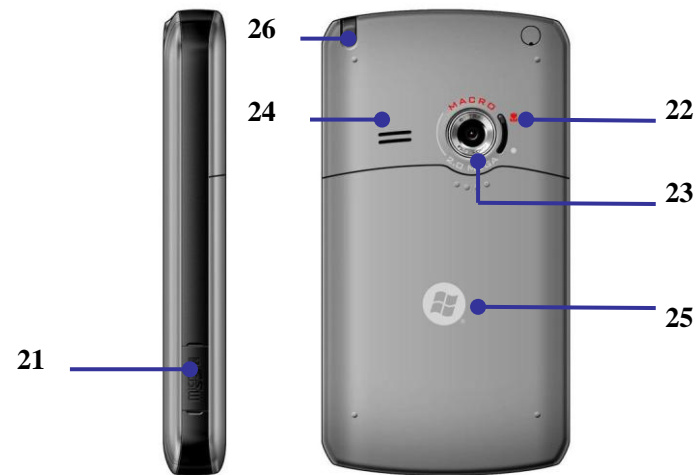

No.	Item	Function
21	<b>MicroSD Card Slot</b>	Insert a storage card (MicroSD) for storing data.
22	<b>Zoom button</b>	Use this key to adjust the zoom for Micro mode.
23	<b>Camera Lens</b>	Use this built-in camera to take photos or video clips.
24	<b>External Speaker</b>	Allows you to listen to audio media or hands-free calls.

<b>25</b>	<b>Cover Latch</b>	Slide this latch to release the battery cover.
<b>26</b>	<b>Stylus</b>	Use the stylus to write, draw, or select items on the touch screen.

## LED indicators

The various colors that might display in the LED Indicator area are summarized here.

LED Status	Status
Solid Red	Battery is charging or the phone is using ActiveSync to synchronize with a PC
Green blinking (slow)	There are unread SMS or Email messages or missed calls.
Green blinking (fast)	There is an incoming call.
Red and green blinking in turn (slow)	There are unread SMS or Email or missed calls while charging.
Red and green blinking in turn (fast)	There is an incoming call while charging.


## Step-by-step setup of phone

### Install and Charge battery

The battery must be fully charged before you use your phone for the first time. The battery can be charged with the phone turned on or off.

#### Opening the cover and removing the battery

1. Hold the phone with one hand and the device facing down, use your thumb to press the back cover of the phone and slide it open towards the bottom of the phone.
2. Remove the battery by lifting it up from the bottom end as shown in the illustration.

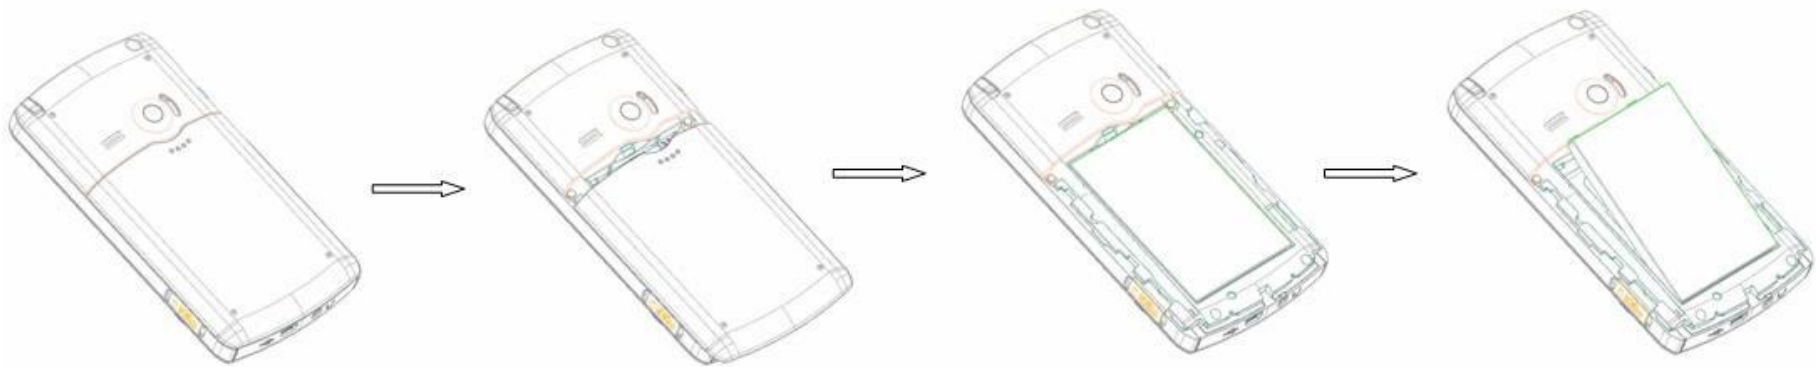

#### Installing the battery

1. Align the exposed metal contacts on the edge of the battery with the prongs in the body of the phone and gently push the bottom of the battery into place.
2. Slide the cover on the phone.

## SIM and MicroSD card

### Inserting the SIM card

1. Follow the instructions on the previous page for removing the back cover and battery.
2. Insert the SIM card into the tray with its gold-plated contacts facing down. The cut-out edge of the SIM card should be on the top left and align with the same shape on the body of the device.



### Inserting a MicroSD card

Use only micro Secure Digital (MicroSD) cards in your device's memory card slot. You can install the storage card to store images, video clips, music and other data in your phone.

1. Follow the instructions on the previous page for removing the back cover and battery.

2. Slide the MicroSD card into the holder, with the gold-plated contacts facing upwards and pushed in first.
3. Push the card down into the device. You will hear a click sound when it is locked into place.

## Switching your phone on and off

### Turning on your phone

The power button location is indicated in page 3 and 4. Press and hold the power button for several seconds to switch your phone on and off.

## Installing ActiveSync

If you use Outlook on your desktop or notebook PC, you can synchronize email, contacts, calendar, and other data between your phone and your PC, keeping information up to date in both devices.

### Installing ActiveSync on your PC

1. Insert the Getting Started CD into the CD drive of your PC.
2. Follow the instructions on the installation wizard screen to install ActiveSync.
3. Connect the Sync cable to the phone and plug it into your PC's USB port to synchronize.
4. When PC detects a USB connection, the ActiveSync Synchronization Setup Wizard will start. Follow the instructions on the screen and select the items you wish to synchronize.

## Making a phone call

1. Ensure your SIM card is installed and the battery is fully charged.

2. From the Today Screen - Enter the phone number by dialing the number on the keypad and press the TALK button (indicated in the phone overview section) to initiate the call.
3. From any other screen – Press the TALK button to go to the phone application, then enter the phone number by dialing the number of the keypad and press the TALK button to initiate the call.
4. You may also search your contacts for the person you wish to call and then tap & hold the contact & select “call work”, “call home” or “call mobile” whatever the case may be.

### Ending a call

Press the END button to finish the call

### Using as a modem

You can use the phone as a modem to connect your computer to the internet.

1. Connect the phone to the computer with the USB cable.
2. On the phone, click on the “Start” menu and then select “Programs”
3. Click on the icon “Internet Sharing”.
4. At the bottom of the screen, click on “Connect”. The phone will connect to the internet and automatically set up a network connection with your PC.

(Please allow your computer to install the necessary device drivers if asked to do so. The ActiveSync will automatically terminate during “Internet Sharing”)

5. Click on “Disconnect” to terminate the internet connection sharing and the network connection between the PC and the phone.

## Camera and Video Recorder

### Camera

Your Smartphone is equipped with a digital camera that can record both still pictures and moving images.



#### Capturing a picture:

To enter the Camera, you may press the Camera key (see page 3) or tap Start > Programs> Camera or tap Start.> Programs> Pictures & Videos> Camera icon.

In the middle of screen you will see the current image being seen by the camera. To capture the image, press the Camera key on the side of the device, or the center key of the Navigation pad. You will hear a shutter sound and the picture will be saved.

#### Capturing a video

From the camera screen, tap the camera icon on the top left corner. You will see the icon turn into a video camera. This indicates you are now able to capture moving images. To start recording, press the Camera key on the side of the device, or the center key of the Navigation pad. You will see a progress bar with a timer at the bottom of the screen and a red dot followed by the word "REC" flashing on the top left of the screen. This indicates you are recording. To stop, press the Camera key, or center key of the Navigation pad, or tap the "stop" square on the screen itself and the video will be saved.

The maximum length of video capture is determined by the amount of free memory of the device, or the storage card to which you are saving.

## Camera tools



There are several tool icons on the camera screen. They allow you to do things like switching between the still & video camera, switching between the front & back camera, setting a timer for picture capture or video length, saving to the devices memory or the memory card, adjusting brightness, zooming in and out, choosing color, black & white, or sepia tones, etc. Take some time to become familiar with these features.

## Micro Mode

You can adjust the zoom button on the back of the device (indicated in the phone overview page) to allow you to choose between Micro mode for close-up shots & for use with “WorldCard Mobile” business card recognition (red flower icon – top selection), or normal mode for regular pictures & video (white dot icon – bottom selection).

## Pictures and videos

You can view pictures stored in your phone or storage card using the Pictures & Videos application.

From here you can also select a picture to set as wallpaper for your Today Screen or you may send the picture to others.



### Previewing pictures

To start the program, go to Start > Programs> Pictures & Videos

After you enter Pictures & videos, you will see an on-screen preview of all pictures stored on both your phone and memory card.

- Click on any picture to zoom in on it.
- On the preview screen, press navigation keys to preview previous/next picture in turn.
- Using either the “menu” soft key, or tapping and holding on any picture, you can perform functions such as sending, beaming, saving to contact, deleting or editing your pictures.

For more assistance: [www.dotelkomphones.co.za](http://www.dotelkomphones.co.za) or call 0861 627 334